


S4X40 installation manual

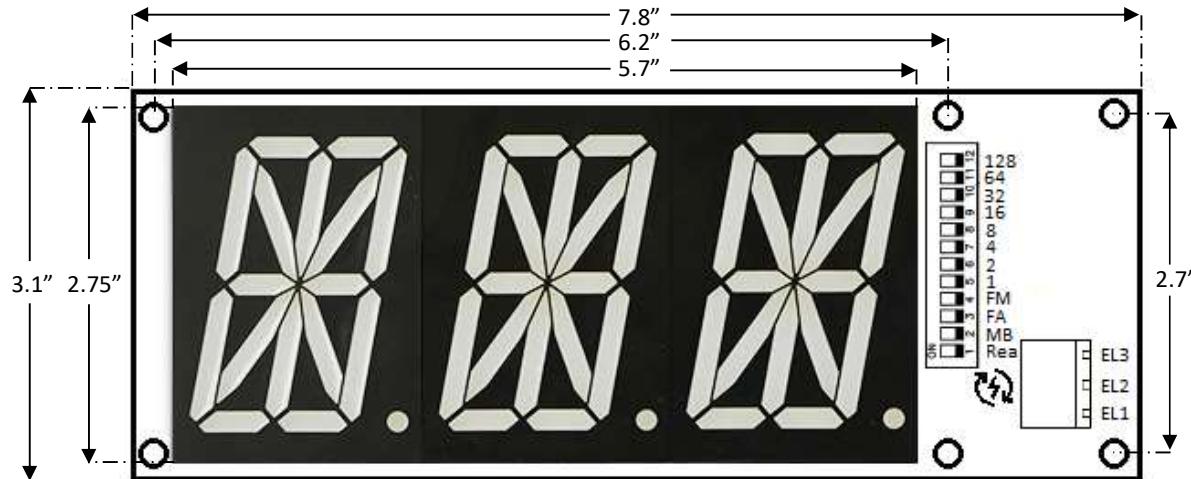

For all call travel : Address = 0

For all call arrival : Address = 0xFF