


## F7020 – Isolated CANBus 7” LCD indicator

### Installation manual

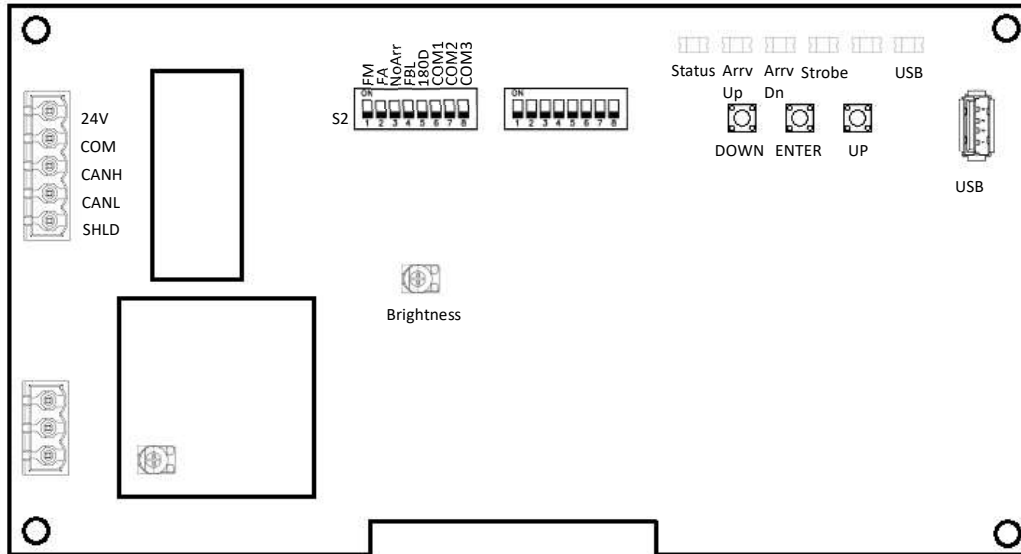

- Supply must be between 16VDC to 28VDC.
- Must be installed in COP.
- Brightness of the LCD is controlled by “brightness” potentiometer.
- Press ENTER to go the main menu of the LCD, then navigate with UP/DOWN switches. Refer to F7022 operation manual on our website.
- Status LED :

Status LED State	Description
Steady	No communication
Slow Blink	System error
Fast Blink	Communication active with no error

SW #	#	Text	Description						
S2	1	FM	ON -> Blank the display in fire mode						
	2	FA	ON -> Blank the display in fire alternate mode						
	3	NoArr	ON -> Blank the arrow						
	4	FBL	ON -> 100% backlight intensity OFF -> 80% backlight intensity (Backlight life enhanced)						
	5	180D	ON -> Portrait mode (If existing within the config)						
	Communication		CAN JRT	CAN JRT	CAN Thyssen				
	6	COM1		●					
	7	COM2			●				
	8	COM3							